


Wiring Diagram Type 911 (MSD Mod)

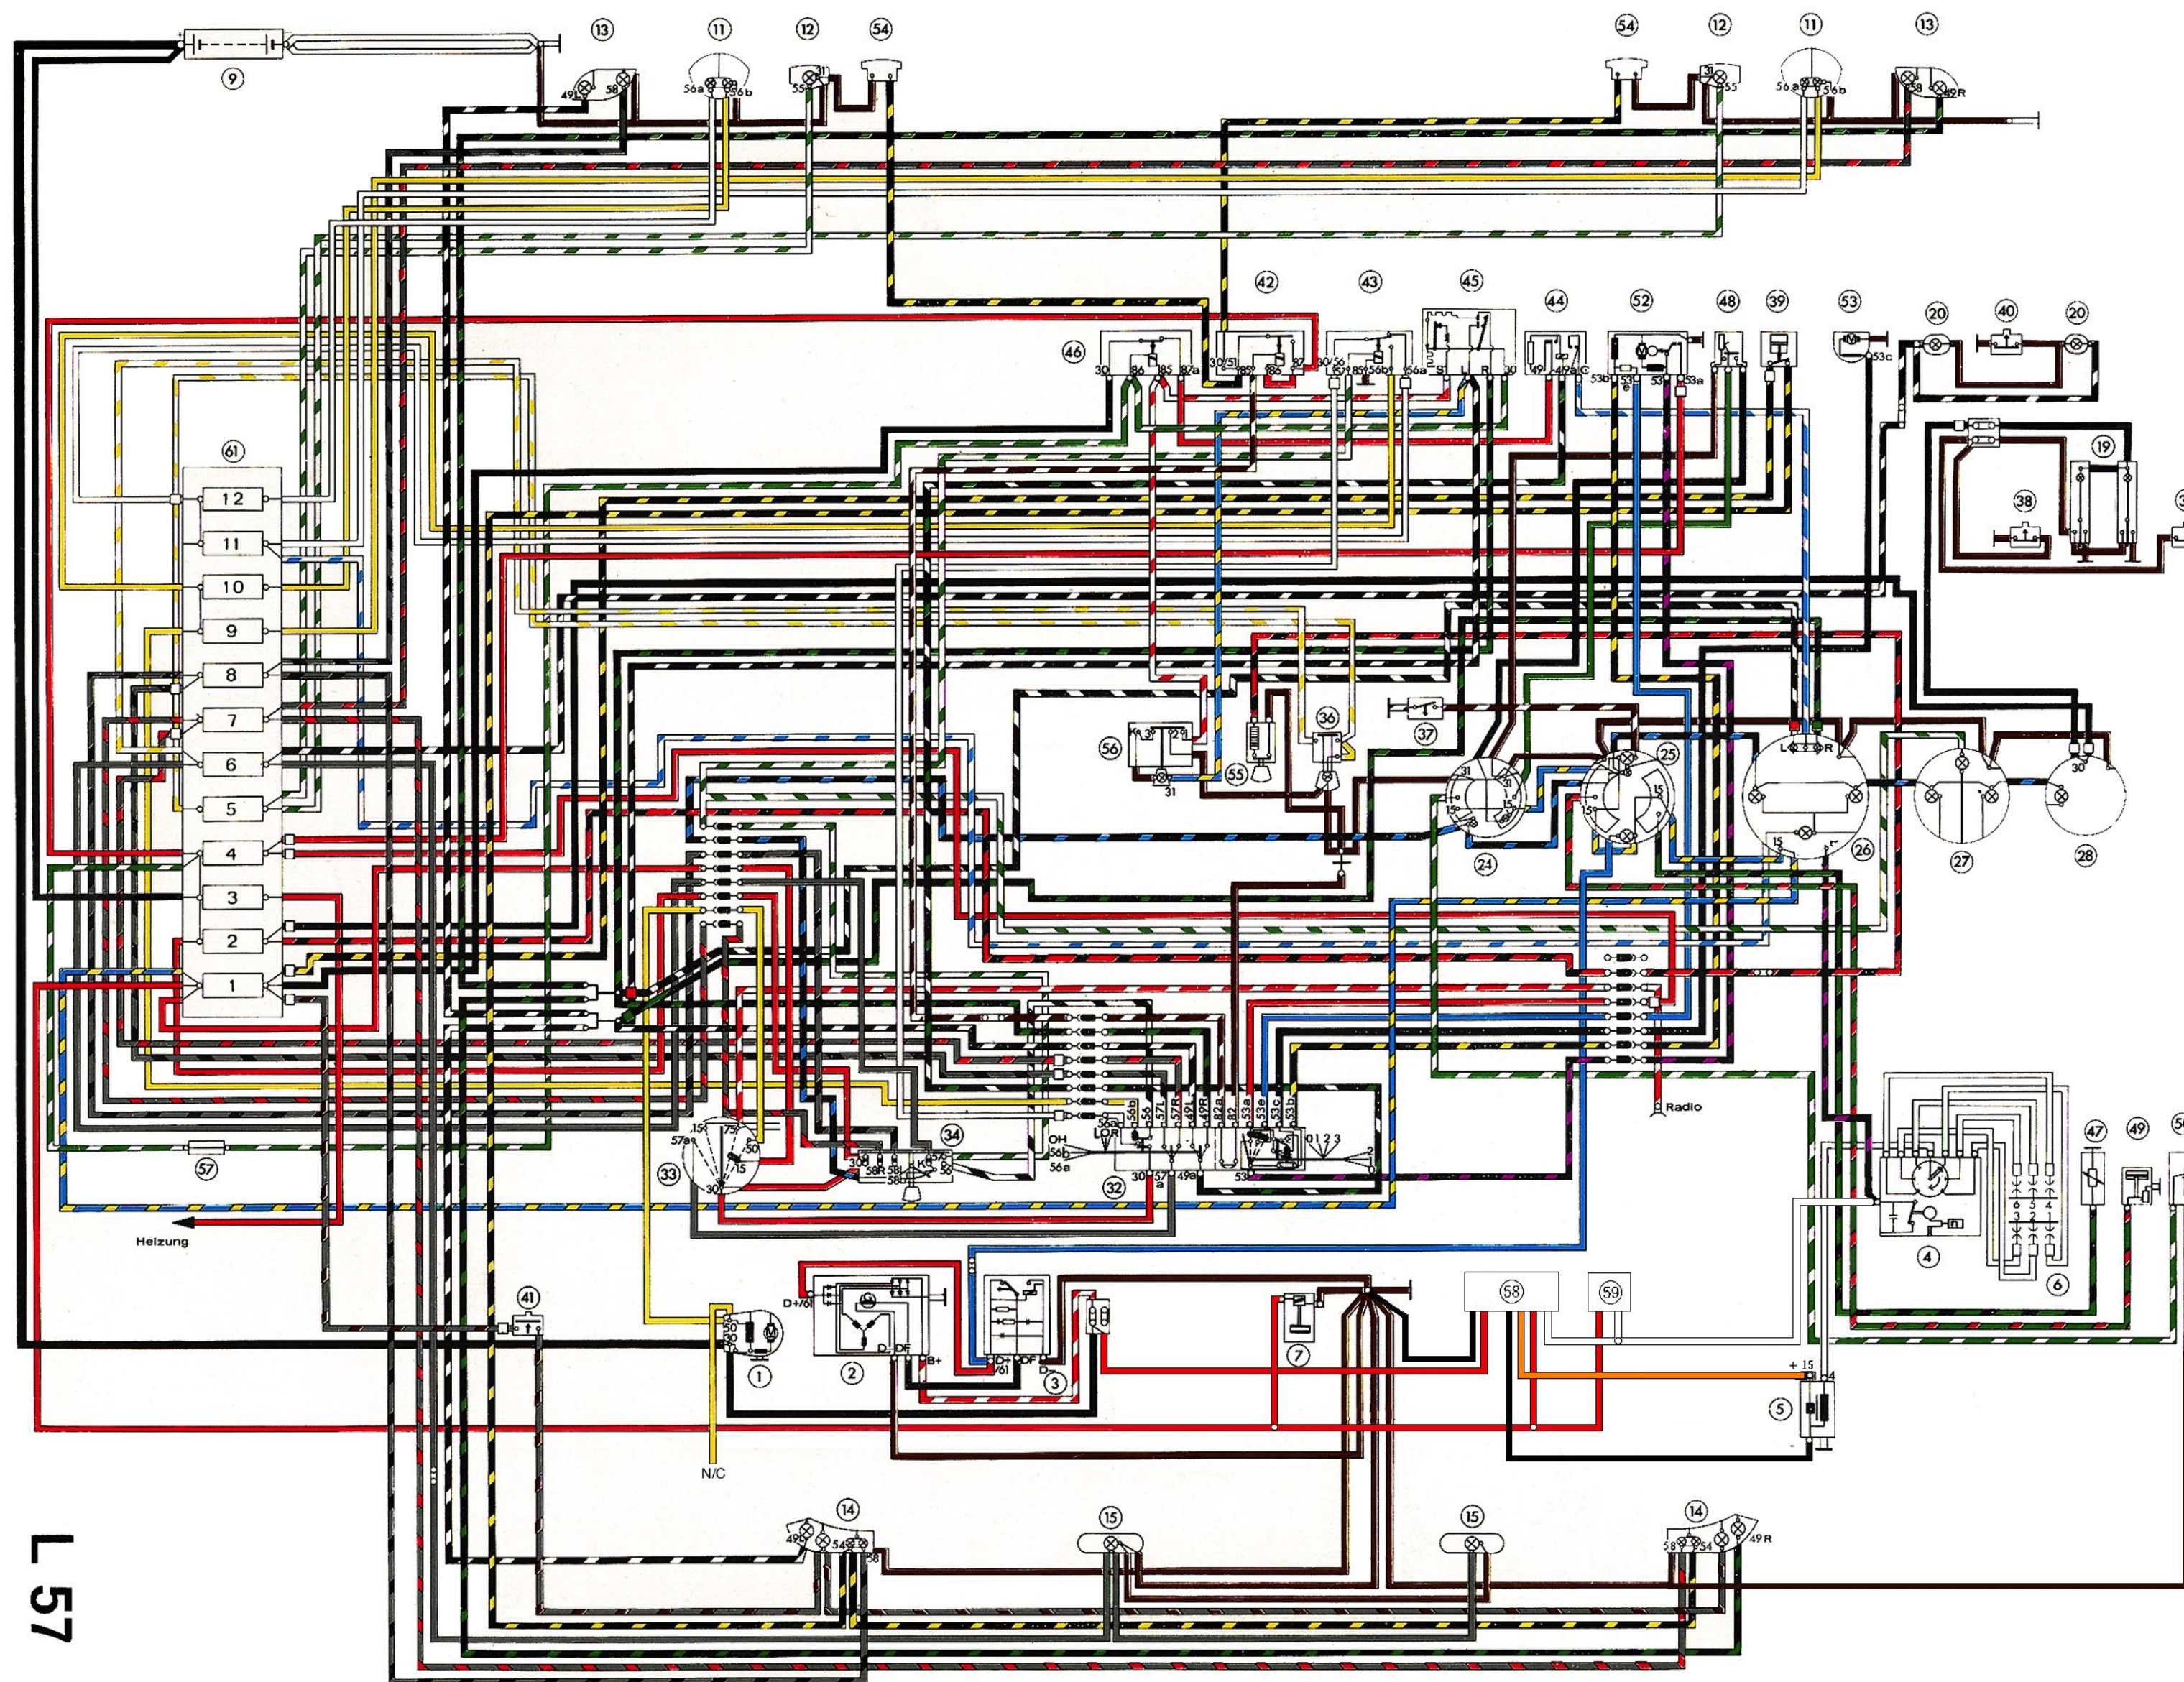

Key to wiring diagram

- ① Starter motor
- ② Alternator
- ③ Control box
- ④ Ignition distributor
- ⑤ Ignition coil (blue coil)
- ⑥ Spark plugs
- ⑦ Fuel pump
- ⑧ Resistor
- ⑨ Battery
- ⑩ Headlamps
- ⑪ Fog lamps
- ⑫ Blink/parking lights
- ⑬ Tail/stop/blink/back-up lights
- ⑭ License plate light
- ⑮ Interior light
- ⑯ Trunk light
- ⑰ Small combination instrument
- ⑱ Large combination instrument
- ⑲ Transistorized tachometer
- ⑳ Speedometer
- ㉑ Clock
- ㉒ Blink/dimmer/signal/wiper/washer switch with signal knob on steering wheel
- ㉓ Starter/ignition switch
- ㉔ Light switch
- ㉕ Fog lamp switch with control light
- ㉖ Handbrake control light switch
- ㉗ Door post contact switch
- ㉘ Brake light switch
- ㉙ Trunk light switch
- ㉚ Back-up light switch
- ㉛ Signal horn relay
- ㉜ Relay for light signal
- ㉝ Blink light unit
- ㉞ Control light unit
- ㉟ Control light relay
- ㊱ Oil temperature transmitter
- ㊲ Fuel tank unit
- ㊳ Oil pressure transmitter
- ㊴ Oil level transmitter
- ㊵ Resistor relay
- ㊶ Windshield wiper motor
- ㊷ Windshield washer pump
- ㊸ Signal horn
- ㊹ Cigarette lighter
- ㊺ Control light switch
- ㊻ Control light fuse
- ㊼ MSD ignition 6201
- ㊽ MSD tach adapter 8910
- ㊾ Fuse box

Fuses

1. Stop light, blinkers, back-up lights
2. Interior light, cigarette lighter, clock
3. Auxiliary heater
4. Windshield wipers and washer
5. Fog lamps
6. License plate light, trunk light
7. Parking light, RH
8. Parking light, LH
9. Low beam, RH
10. Low beam, LH
11. High beam, RH, high beam control light
12. High beam, LH

IMPORTANT

Disconnecting of battery with running engine results in immediate destruction of alternator.